

BATTERY CARE INSTRUCTION;

- The battery must be fully charged before using for the first time. After long period of non-use, the battery must be fully charged before using.
- For best performance, always keep the cordless hand set in the telephone base in charging mode.
- Always remove battery if the handset is not used for long period of time.
- Always charge the hand set with AEI approved battery and adaptor.

CAUTION;

Keep battery away from direct sunlight , moisture , heat source.

Do not drop or attempt to open/disassemble the battery.

To reduce safety risks , read and follow the instructions.

BATTERY WARRANTY;

Battery warranty is based from Delivery Order date for period of 12 months

Spare accessories purchase (stand alone) is warranted 6 months from Delivery Order date.

Note: It is recommended to replace the battery after about 2 years of normal use.

