# **SIP DECT Phone**



VM-8200-SMKLT(S) / VM-8100-SMKLT(S)

> QIG V 1.1

## 1 Over view

This phone is a full-feature telephone that provides voice communication. Read this QIG carefully to learn how to operate this product and take advantage of its features.

#### **Package Contents**

When unpacking the phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your dealer for a replacement.

- 1. Base Unit
- 2. Cordless Handset
- 3. Stand
- 4. Battery
- 5. AC Adaptor
- 6. RJ-45 Cable
- 7. Quick Installation Guide (This document)

## 2 Product Description

The following contains important information to help you familiarize with the functions of the VoIP phone.

#### **Front View**



1. Base unit keys

	Name	Description
1	Display screen	To display calls and status information.
2	Alphanumerical keys	Press these keys to enter phone numbers and texts.
3	Function keys	
	LANGUAGE	Press to select display language
	EMERGENCY	Press to make an emergency call.
	HOME	Press to return to idle page

Name	Description
LINE 1 / LINE 2	To indicate a line been used as the following status:
	- Idle: No LED indication.
	- Call on hold: Red LED flash
	- In call: Red LED.
HOLD (2 line only)	Press to put an active call on hold.
MUTE (single line	Press to mute MIC.
only)	
REDIAL	Press to call the last dialed number.
SPEAKER	Press to activate the speakerphone for hands free
	conversations.
VOLUME UP/DOWN	Press to increase or decrease the volume of the ringer
	tone or speakerphone.


	-	
<	SELECT	>
EMERGENCY	FRONT DESK	MESSAGE
HOLD	SPEAKER	VOLUME
(I	1	~
1	2 авс	3 DEF
4 сні	5 лкі	6 MNO
7 PORS	8 TUV	9 wxvz
*	0 OPER	#
	8	
		0000

#### 2 Handset keys

	Name	Description
1	Display screen	Display calls and status information.
2	RIGHT / LEFT key	Press to scroll through on-screen services.
3	SELECT SERVICES	Press to select on-screen service.
4	LINE 1 / LINE 2	Press to select line or answer a call.
5	END key	Press to end a call
6	Alphanumerical keys	Press these keys to enter phone numbers and texts.
7	Function keys	
	HOLD (2 line only)	Press to put an active call on hold.
	MUTE (single line only)	Press to mute MIC.
	SPEAKER	Activate the speakerphone to allow hands free
		conversations.
	VOLUME	Press to increase or decrease the volume of the ringer
		tone, handset, or the volume of the current call using
		the speakerphone. There are three levels: small,

Name	Description
	middle and large volume.
MESSAGE	Press to retrieve voice messages.
FRONT DESK	Press to contact with front desk service.
EMERGENCY	Press to make an emergency call.

### **Back View**

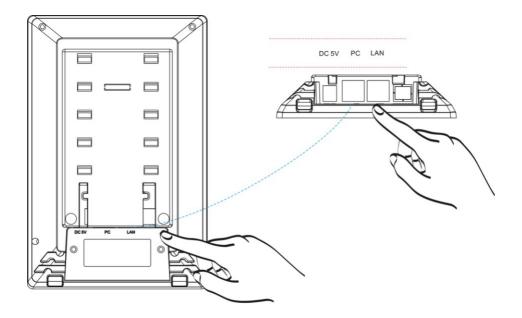


NO.	Name	Description
1	LAN port	Connects to HUB, ADSL, or Switch(PSE)
2	PC port	Connects to computer
3	DC 5V Power jack	Connects to AC power adapter. (Optional. While base unit is not powered via a PSE)

### **Connecting the Phone**


The following illustration shows how to connect the power, LAN and PC ports of VoIP phone.



The following illustration shows how to install the phone and stand.

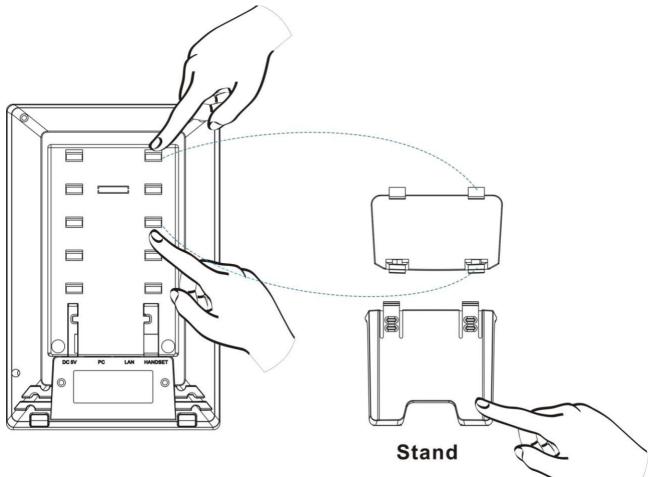

The following illustration shows how to install the handset and battery.

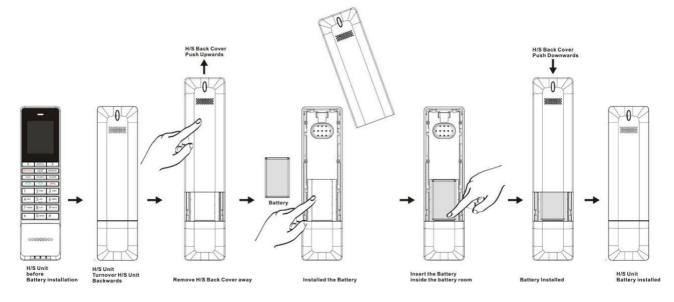

# 3 Operation

#### Answering a Call

An incoming call is indicated by a ringing tone and a flashing indicator at the top of handset. You can answer the call by doing one of the followings:

- IPick up the Handset to answer the call.
- Press the LINE (LINE1/LINE2) key on the base or handset to answer the call.

#### Making a Call

#### Dialing with the Keypad

- 1 Enter the telephone number with the alphanumerical keypad.
- After entering the number you want to call, press the **#** key to force dialing or wait for 4 seconds before the number is dialed automatically.

#### Using the on-screen programmable service function soft keys



You can use the pre-assigned service function, to configure the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

To call a number using service soft keys dialing, follow the steps below:

- Press hotel Services soft key.
- IPress service icon soft key to precede service dial.


#### Using the Programmable Service keys on handset

You can use the pre-assigned service hotkeys, to configure the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

To call a number using service hotkeys, follow the steps below:

Press the service hotkeys that has been pre-assigned to the phone number and the call will start automatically.

#### Using the service function keys on handset

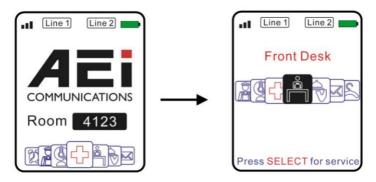

You can use the pre-assigned service function, to configure the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

To call a number using speed service dialing, follow the steps below:

- Press **SELECT SERVICES** key and use **RIGHT/LEFT** key to select service.
- Press **SELECT SERVICES** key again to precede service dial.

#### **Call Options**

While a call is in progress, a number of additional options are available.

#### Using the Speaker Phone

For hands free operation, you can use the built-in speaker to talk on the phone. To use the speakerphone, follow the steps below:

- <sup>I</sup> While talking on the phone, press the **SPEAKER** key on the handset or base unit to enable the Speakerphone function.
- Press **SPEAKER** key again to terminate the call.

#### Putting a Call on Hold

You may want to put a call on hold temporarily while doing some work or attending to a second incoming or outgoing call. To put a call on hold, do one of the following:

- IPress the HOLD key on the phone to put the call on hold.
- <sup>I</sup> When you receive a second call, press the next available **LINE** key to attend to the new call, and the first call will be put on hold automatically.

#### **Checking Voice Messages**

If the **message waiting indicator** at top of handset lights up or **MESSAGE** key LED on base in red, it indicates that there are one or more new messages in voicemail box.

 Image: Press the MESSAGE key on the phone to retrieve voice messages.

(An external ITSP or PBX must support voice message feature. And you need to set a voice message code before using the voice mail feature.)

#### Pairing handset and base unit

Automatic pairing:

- Image: Put handset on the base, the base will start pairing automatically.
- IAfter finished pairing, the base will play the beep tones.

#### Manual pairing:

On the base, press **\*112\*810#** to start pairing mode(broadcast RFPI)

- Press **\*\*6862**\* and select "Subscribe" on a handset. A sequence of RFPI number shows in handset display if a nearby base is in paring mode.
- I If shown RFPI matches the numbers printed at the back of the base, press LINE (LINE 1) key to confirm pairing.
- 1 Otherwise, press **#** key to search again.

To pair multiple handsets to a base: (The base must be configured to pair with multiple handsets)

- B Reset base pairing by pressing **\*112\*811#** on the base
- Image: Pair handsets one by one via automatic or manual pairing descried above

### **Charging the Handset Battery**

You would need to charge the handset battery before using the handset.

- Install the battery into the handset.
- Place the handset onto the base unit and base unit will start to charge the handset automatically.
- The charging indicator lights up in red during charging progress. The LED goes off after the handset battery is fully charged.
- For best performance, keep the handset in the telephone base or charger base when not in use.
- The battery is fully charged after 10 hours of continuous charging.
- If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

# 4 Support

To configure through the web browser, do the following:

- Ensure the phone is powered up and connected to a DCHP network.
- Press HOLD/MUTE \*112\*113# (HOLD for 2-Line / MUTE for 1-Line), the IP address is displayed on the LCD screen.
- Open your browser (such as Internet Explorer, Firefox, etc.) and type in the web address of the phone. For example, if the IP address you obtain in step 4 above is 192.168.1.2, enter the web address: http://192.168.1.2:8000.
- When the Web login front page is displayed. Enter the user name and the password and click **Login**. The administrator's user name and password are "**admin**" and "**1234**" respectively.

### 5 Battery Safety Instructions

- CAUTION: Use only supplied battery.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and cause burn or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this guide.

## 6 Important Information

- Only use the battery provided by AEI, may be a risk of explosion if wrong type of battery is used.
- Use only the power adapter supplied with this product.
- If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.
- You may place the handset into the base after each call in order to charge the battery.
- For technical support, please email to <u>support@aeicommunications.com.tw</u>