

BATTERY CARE INSTRUCTION

The battery must be fully charged before using for the first time. After long period of non-use, the battery must be fully charged before using.

For best performance, always keep the cordless hand set in the telephone base in charging mode.

Always remove battery if the handset is not used for long period of time.

Always charge the hand set with AEI approved battery and adaptor.

CAUTION

Keep battery away from direct sunlight, moisture, heat source.

Do not drop or attempt to open/disassemble the battery.

To reduce safety risks, read and follow the instructions.

BATTERY WARRANTY

Battery warranty is based from Delivery Order date for period of 12 months

Spare accessories purchase (stand alone) is warranted 6 months from Delivery Order date