

# VR-3100-SBU(S)



## Quick Guide V1.00

*VR-3100-SBU(S) Wi-Fi phone*

# 1. Overview

This phone is a full-feature telephone that provides voice communication. Read this QIG carefully to learn how to operate this product and take advantage of its features.

## Package Contents


When unpacking the phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your dealer for a replacement.

1. Cordless Handset
2. Charging Stand
3. Battery
4. AC Adaptor
5. Quick Installation Guide (This document)

# 2. Product Description

The following contains important information to help you familiarize with the functions of the phone.


## Front View

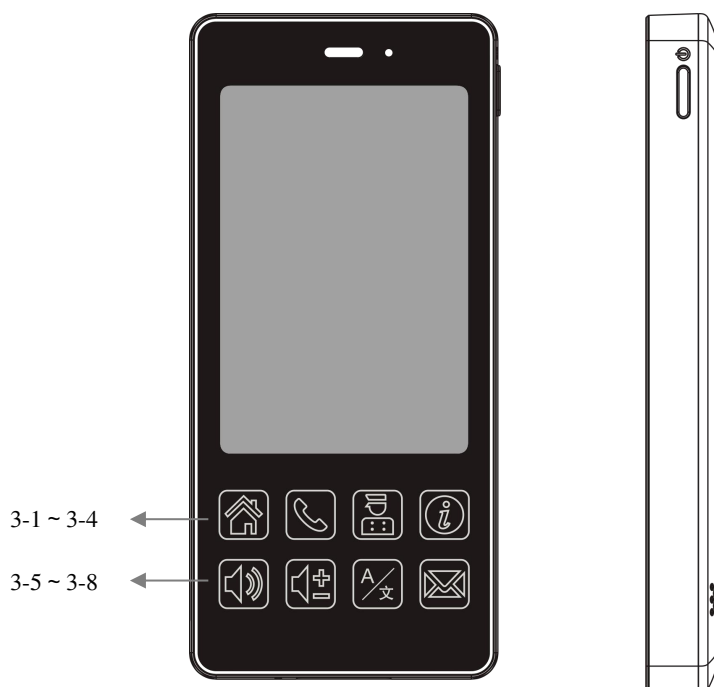

item	Name	Description
1	Display screen	Touchable display
2	Power key	Press to power on/off
3	Function key	
3-1	Home key	Press to return to idle page
3-2	Dial key	Press these keys to enter phone numbers.
3-3	Service key	Press to enter service page.
3-4	Dialing Instruction key	Press to enter Dialing Instructions page. Red LED turns on when handset is charging, Red LED turns off when handset is fully charged,
3-5	Speaker key	Press to activates the speakerphone for hands free


item	Name	Description
		conversations.
3-6	Volume + -	Press to increase or decrease the volume of the ringer tone, handset, or speakerphone.
3-7	Language key	Press to select display language
3-8	Message key	Press to listen to voice messages. Red LED turns on while there is unheard voice message.

### Rear view

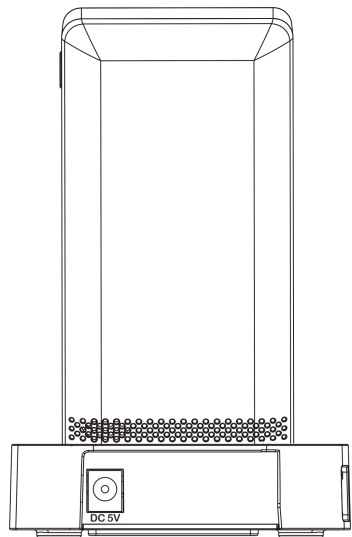

Name	Description
DC jack	Connects to AC power adapter.



### Side view

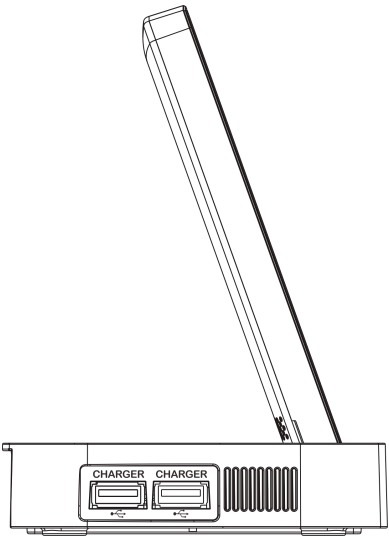



Name	Description
USB Charger ports	Connects to charging cable of mobile device.

### Battery Installation

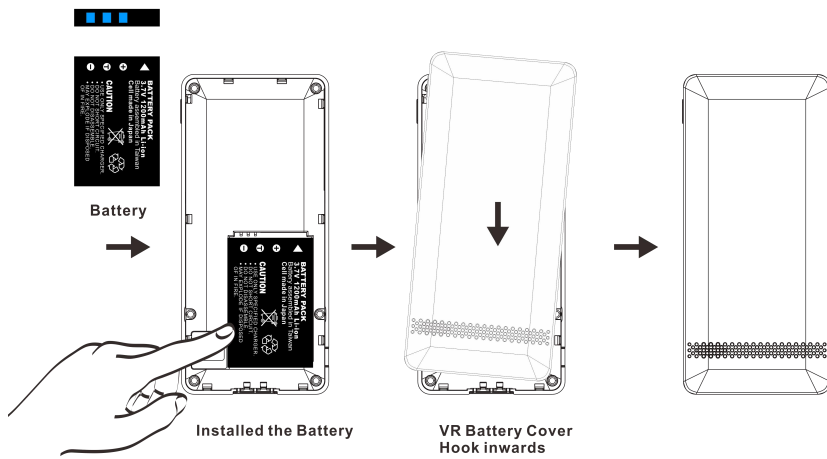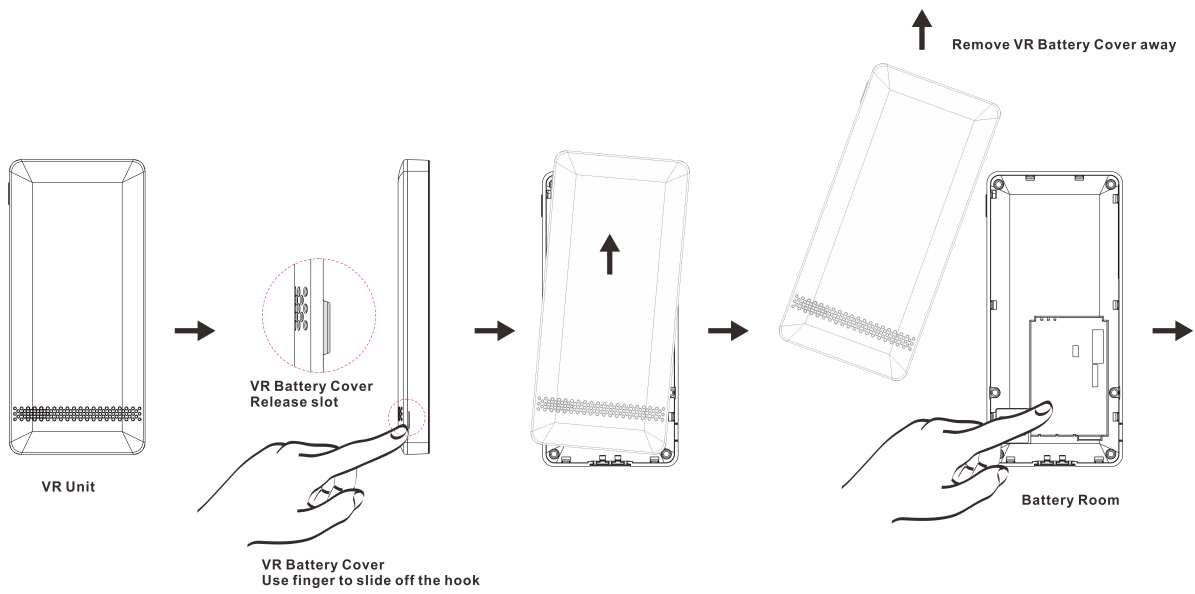The following illustration shows how to install the handset and battery.



### 3. Phone setup

At dialing page , press [**\*\*6862\*** ] to enter system setup menu.

1. Network status  
Display network relative information: MAC address, access point SSID, IP address, and Wi-Fi status.
2. VoIP status  
Display SIP registration status and extension number.
3. Upgrade APP  
Update system firmware (fixed by Auto Provision setting).
4. Upgrade DATA  
Update system partition (fixed by Auto Provision setting).
5. Wi-Fi AP Scan  
Scan nearby APs, select desired AP and enter password to connect.  
\* Press [?] and [ABC] to switch between number and alphabet.
6. Factory Reset  
Reset phone to factory default.
7. Exit  
Exit system setup menu.

### 4. Provisioning

1. Provision config file (\*.cfg)

Sample provision config file :

```
[INFO]
MODEL=VR3100

[SIP_ACCOUNT]
SWITCH=1
USER_NAME=1234
DISPLAY_NAME=1234
AUTH_NAME=1234
PASSWORD=1234
REGIST_SERVER=192.168.168.253:5070
REGIST_IP=192.168.168.253:5070
MWI=0
EXPIRE_TIME=600
DTMF_TYPE=RFC2833
SEND_ALIVE=0
DNSSRV=0

[SPEED_DIAL]
0=1000
1=1001
2=1002
3=1003
4=1004
```

```

5=1005
6=1006
7=1007
8=1008
9=999

[UPGRADE]
PROTOCOL=HTTP
SERVER_IP=192.168.168.253
PORT=80
FIRMWARE=vr3100
PARTITION=vr3100

[SIP_GLOBAL]
LISTEN_PORT=5060
RTP_PORT=10000
PRIMARY_CODEC=G.711 uLaw
SECONDARY_CODEC=G.711 aLaw
RFC2833_TYPE=101
LOG_SERVER=192.168.168.253

[PROVISION]
SERVER=192.168.168.251
FILE=565

[END]
SEND=END

```



After editing, save the config file name as [MAC Address] or [Room number].

MAC Address 00:11:22:33:44:55, config file name: 001122334455.cfg.


Or

Room number 1234, config file name: 1234.cfg.

## 2. Provision Server IP setting

At dialing page , press [**\*\*6861\*(Server IP)#** ].

Provision server supports TFTP and HTTP (port 6122)..

For example: press [**\*\*6861\*192\*168\*168\*253#** ] to set provision server IP: 192.168.168.253



\*TFTP is default protocol.

\*\*Provision files must be under TFTP / HTTP Server root directory.



## 3. Provision file type setting

The phone supports two file types: MAC address or Room number.



At dialing page , press [**\*\*6862\*#** ] to use MAC address type config files.

At dialing page , press [**\*\*6862\*(room number)#** ] to use Room number type config files

#### 4. Wi-Fi Phone provisioning

After connecting to internet and setting up provision server/config file type, press [\*\*6868\*  ] at dialing page  .  
Wi-Fi phone will restart and execute provisioning to complete phone settings.

## 5. Summary of system commands


At dialing page  , press following and  to execute commands:.

**6862*	Enter system setup menu
**6865*	Display firmware version
**6866*	Display MAC address
**6867*	Retrieve AEI tool UDP config
**6868*	Restart phone set
**6862*#	Auto provision use MAC Address config file type
**6862*888#	Auto provision use 888 room number config file type
**6861*192*168*168*253#	Set provision server IP to 192.168.168.253

## 6. Operations


### Answering a Call

An incoming call is indicated by a ringing tone. You can answer the call by doing one of the followings:

Press the **Dial** key  n the handset to answer the call.

### Making a Call

Press **Dial** key for numerical keypad.

Press to enter the telephone number with green dial **key**  to make a call..

### Using the service function

To use the pre-assigned service function for the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

Press **Service** key. 

Tap the icon to call desired service.

### Using the Speaker Phone


While talking on the phone, press the **SPEAKER** key  on the phone fo hands free conversation.

### Charging the Handset Battery

You would need to charge the handset battery before using the handset.

Install the battery into the handset.

Place the handset onto the base unit and base unit will start to charge the handset automatically.

This icon  will show charging progress.

## 7. Support

For technological support, please email to [support@aeicommunication.com](mailto:support@aeicommunication.com).