VR-8X00-SPB



VR-8100-SPB, VR-8200-SPB

DECT peripheral handset phone

Quick Installation Guide

V1.03

1. Overview

This phone is a full-feature telephone that provides voice communication. Read this QIG carefully to learn how to operate this product and take advantage of its features.

Package Contents


When unpacking the phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your dealer for a replacement.

1. **Cordless Handset**
2. **Charging Stand**
3. **Battery**
4. **AC Adaptor**
5. **Quick Installation Guide (This document)**

2. Product Description

The following contains important information to help you familiarize with the functions of the phone.


Front View

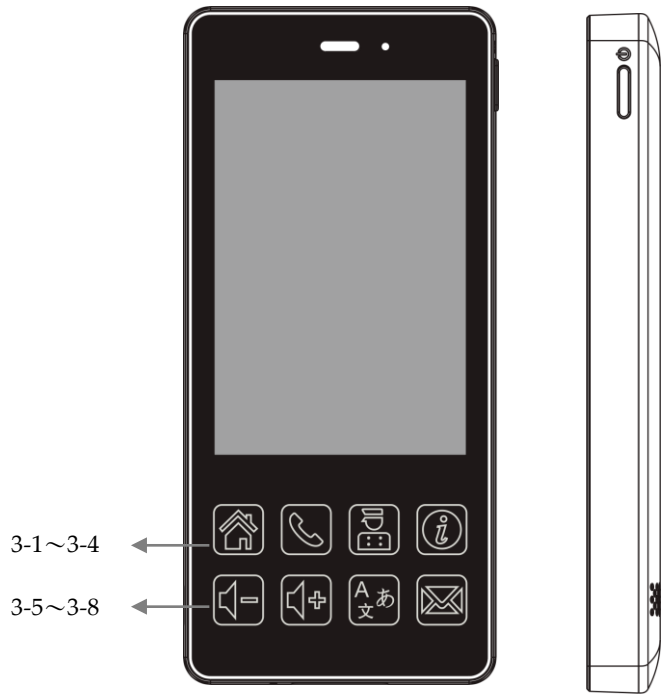

item	Name	Description
1	Display screen	Touchable display
2	Power key	Press to power on/off
3	Function key	
3-1	Home key	Press to return to idle page
3-2	Dial key	Press these keys to enter phone numbers.
3-3	Service key	Press to enter service page.
3-4	Dialing Instruction key	Press to enter Dialing Instructions page. Red LED turns on when handset is charging, Red LED turns off when handset is fully charged,
3-5	Volume -	Press to decrease the volume of the ringer tone or handset


item	Name	Description
3-6	Volume +	Press to increase the volume of the ringer tone or handset
3-7	Language key	Press to select display language
3-8	Message key	Press to listen to voice messages. Red LED turns on while there is unheard voice message.

Rear view

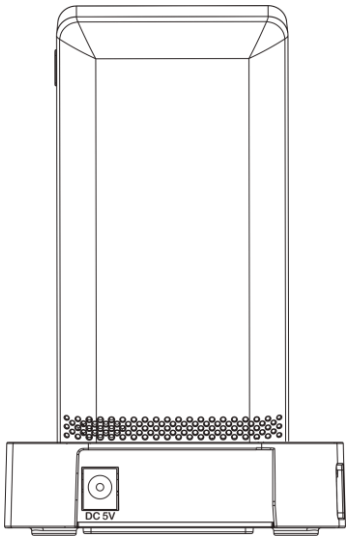


Name	Description
DC jack	Connects to AC power adapter.


Side view

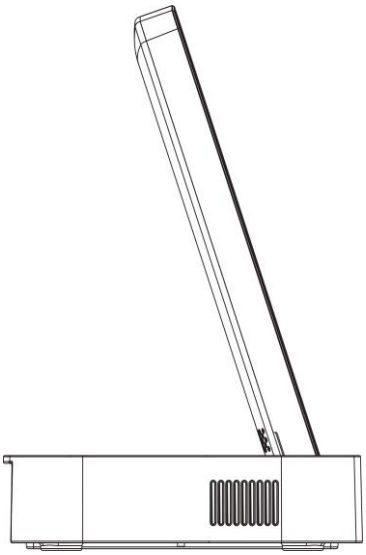

Battery Installation

The following illustration shows how to install the handset and battery.

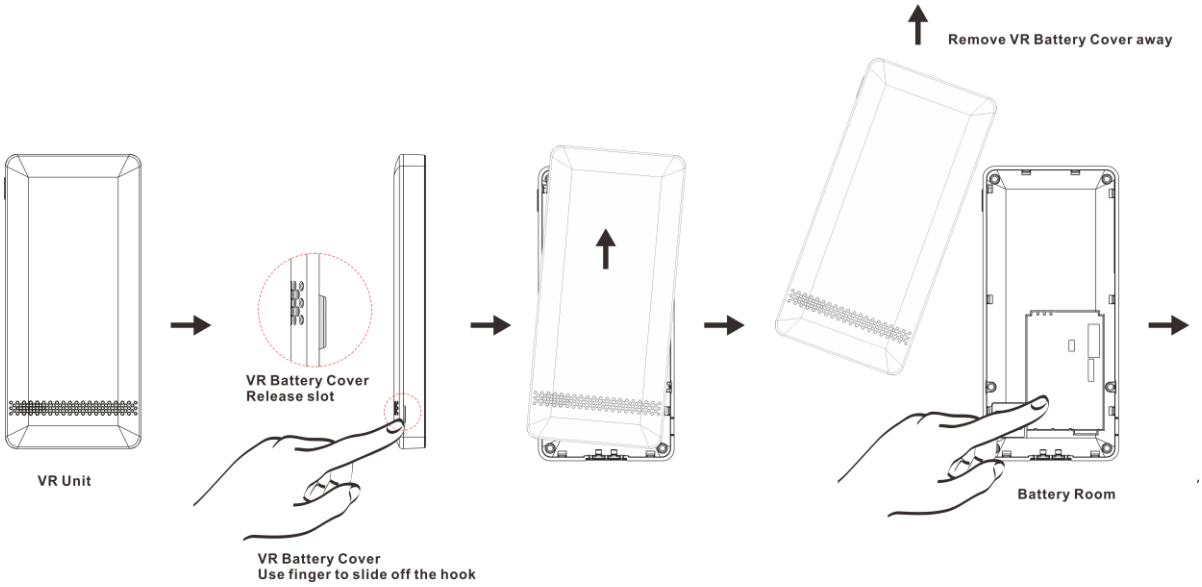

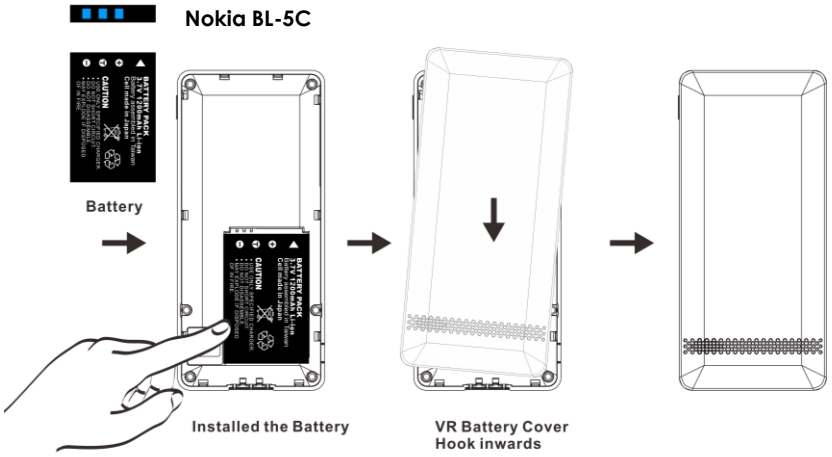

3. Phone setup

At dialing page , press [****6862***] to enter system setup menu.

1. Pair
   Pair with DECT base.
2. Desubscribe
   Desubscribe with the DECT base.
3. Upgrade APP (Supported HTTP only)
   Update system firmware (fixed by Auto Provision setting).
4. Upgrade DATA (Supported HTTP only)
   Update system partition (fixed by Auto Provision setting).
5. Wi-Fi AP Scan
   Scan nearby APs, select desired AP and enter password to connect.
   * Press [?123] and [ABC]to switch between number and alphabet.
6. Factory Reset
   Reset phone to factory default.
7. Exit
   Exit system setup menu.

4. Summary of system commands

At dialing page , press following and to execute commands:.

**6862*	Enter system setup menu
**6865*	Display firmware version
**6866*	Display DECT version
**6867*	Retrieve AEI tool UDP config
**6868*	Restart phone set
**6862*#	Auto provision use MAC Address config file type
**6862*888#	Auto provision use 888 room number config file type
**6861*192*168*168*253#	Set provision server IP to 192.168.168.253

5. Operations

Answering a Call

An incoming call is indicated by a ringing tone. You can answer the call by doing one of the followings:

- Press the **Dial** key on the handset to answer the call.

Making a Call

Press **Dial** key for numerical keypad.

- Press to enter the telephone number with green dial **key** to make a call.

Using the service function

To use the pre-assigned service function for the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

- Press **Service** key.
- Tap the icon to call desired service.

Charging the Handset Battery

You would need to charge the handset battery before using the handset.

- Install the battery into the handset.
- Place the handset onto the base unit and base unit will start to charge the handset automatically.
- This icon will show charging progress.

6. Support

For technological support, please email to support@aeicommunication.com.